

# AEG OKO LAVAMAT 16800

---

MODEL





---


SERVICE MANUAL


---


C6 (common)					
1		●	●	●	●
2		●			●
3		●	●		
4		●		●	
5		●	●	●	
6				●	●
7	●				
8	●				●
9	●			●	
10		●		●	●
11			●		●
12	●			●	●
13	●		●		
14			●	●	
15	●		●		●
16			●	●	●
17	●		●	●	
18	●		●	●	●
19	●	●			
20		●	●		●
21					●
22		●			
23				●	
24			●		
	C1	C2	C3	C4	C5


RESET

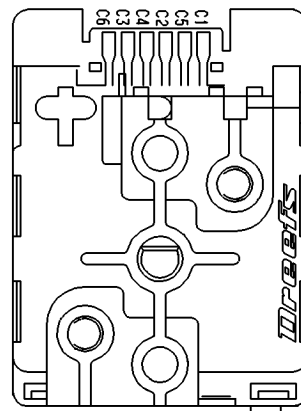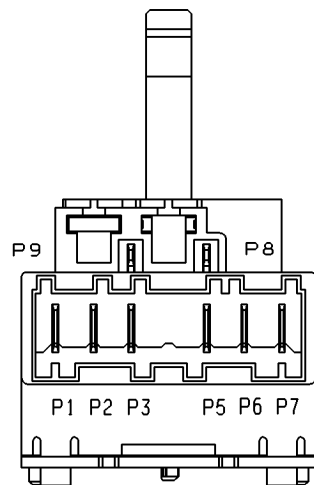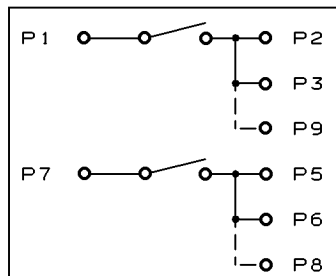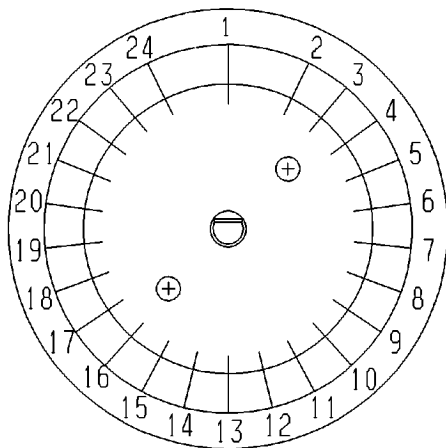

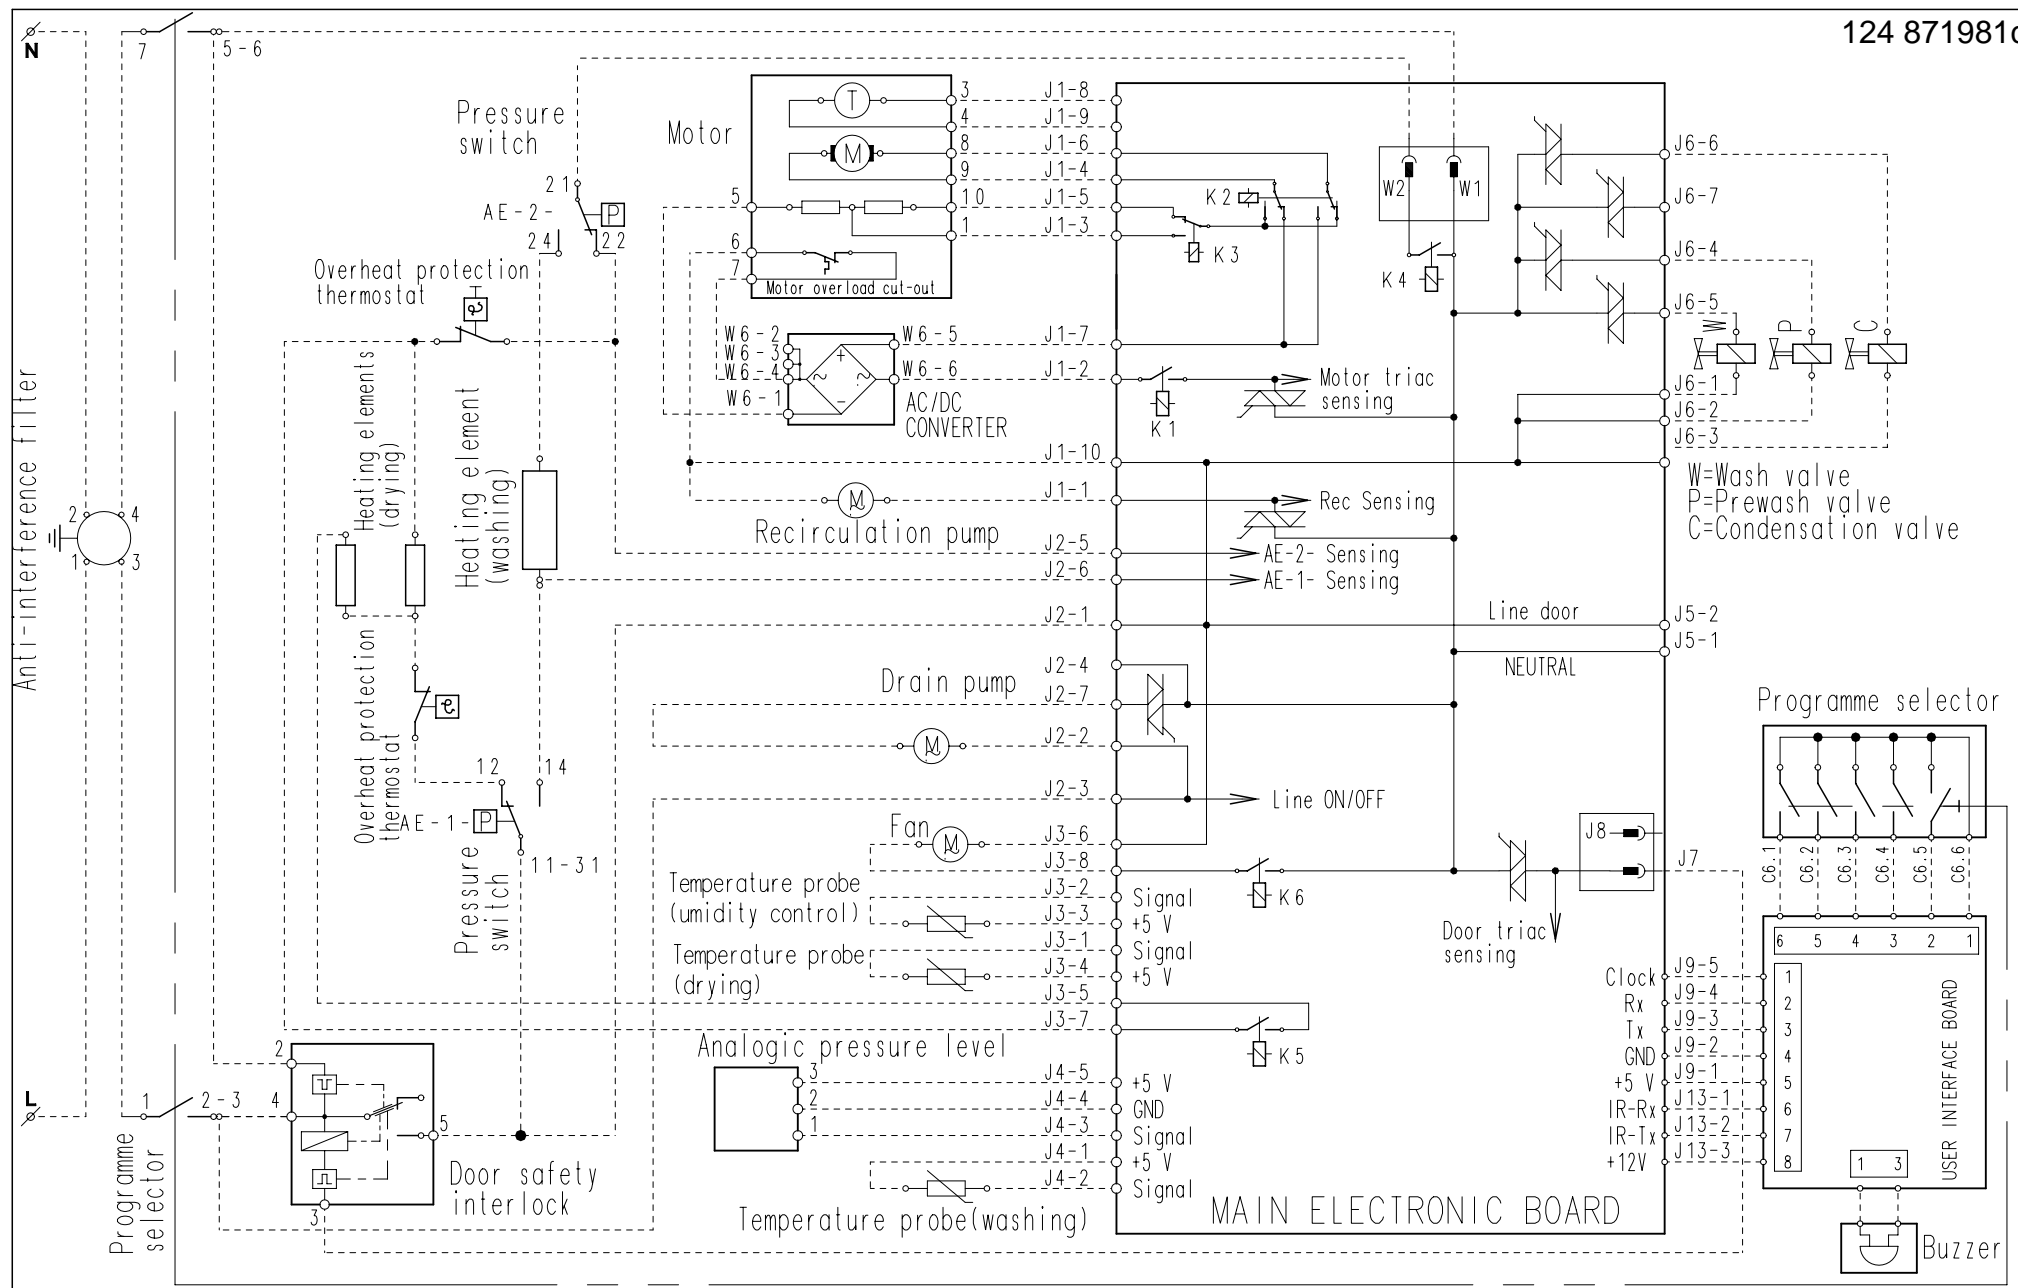

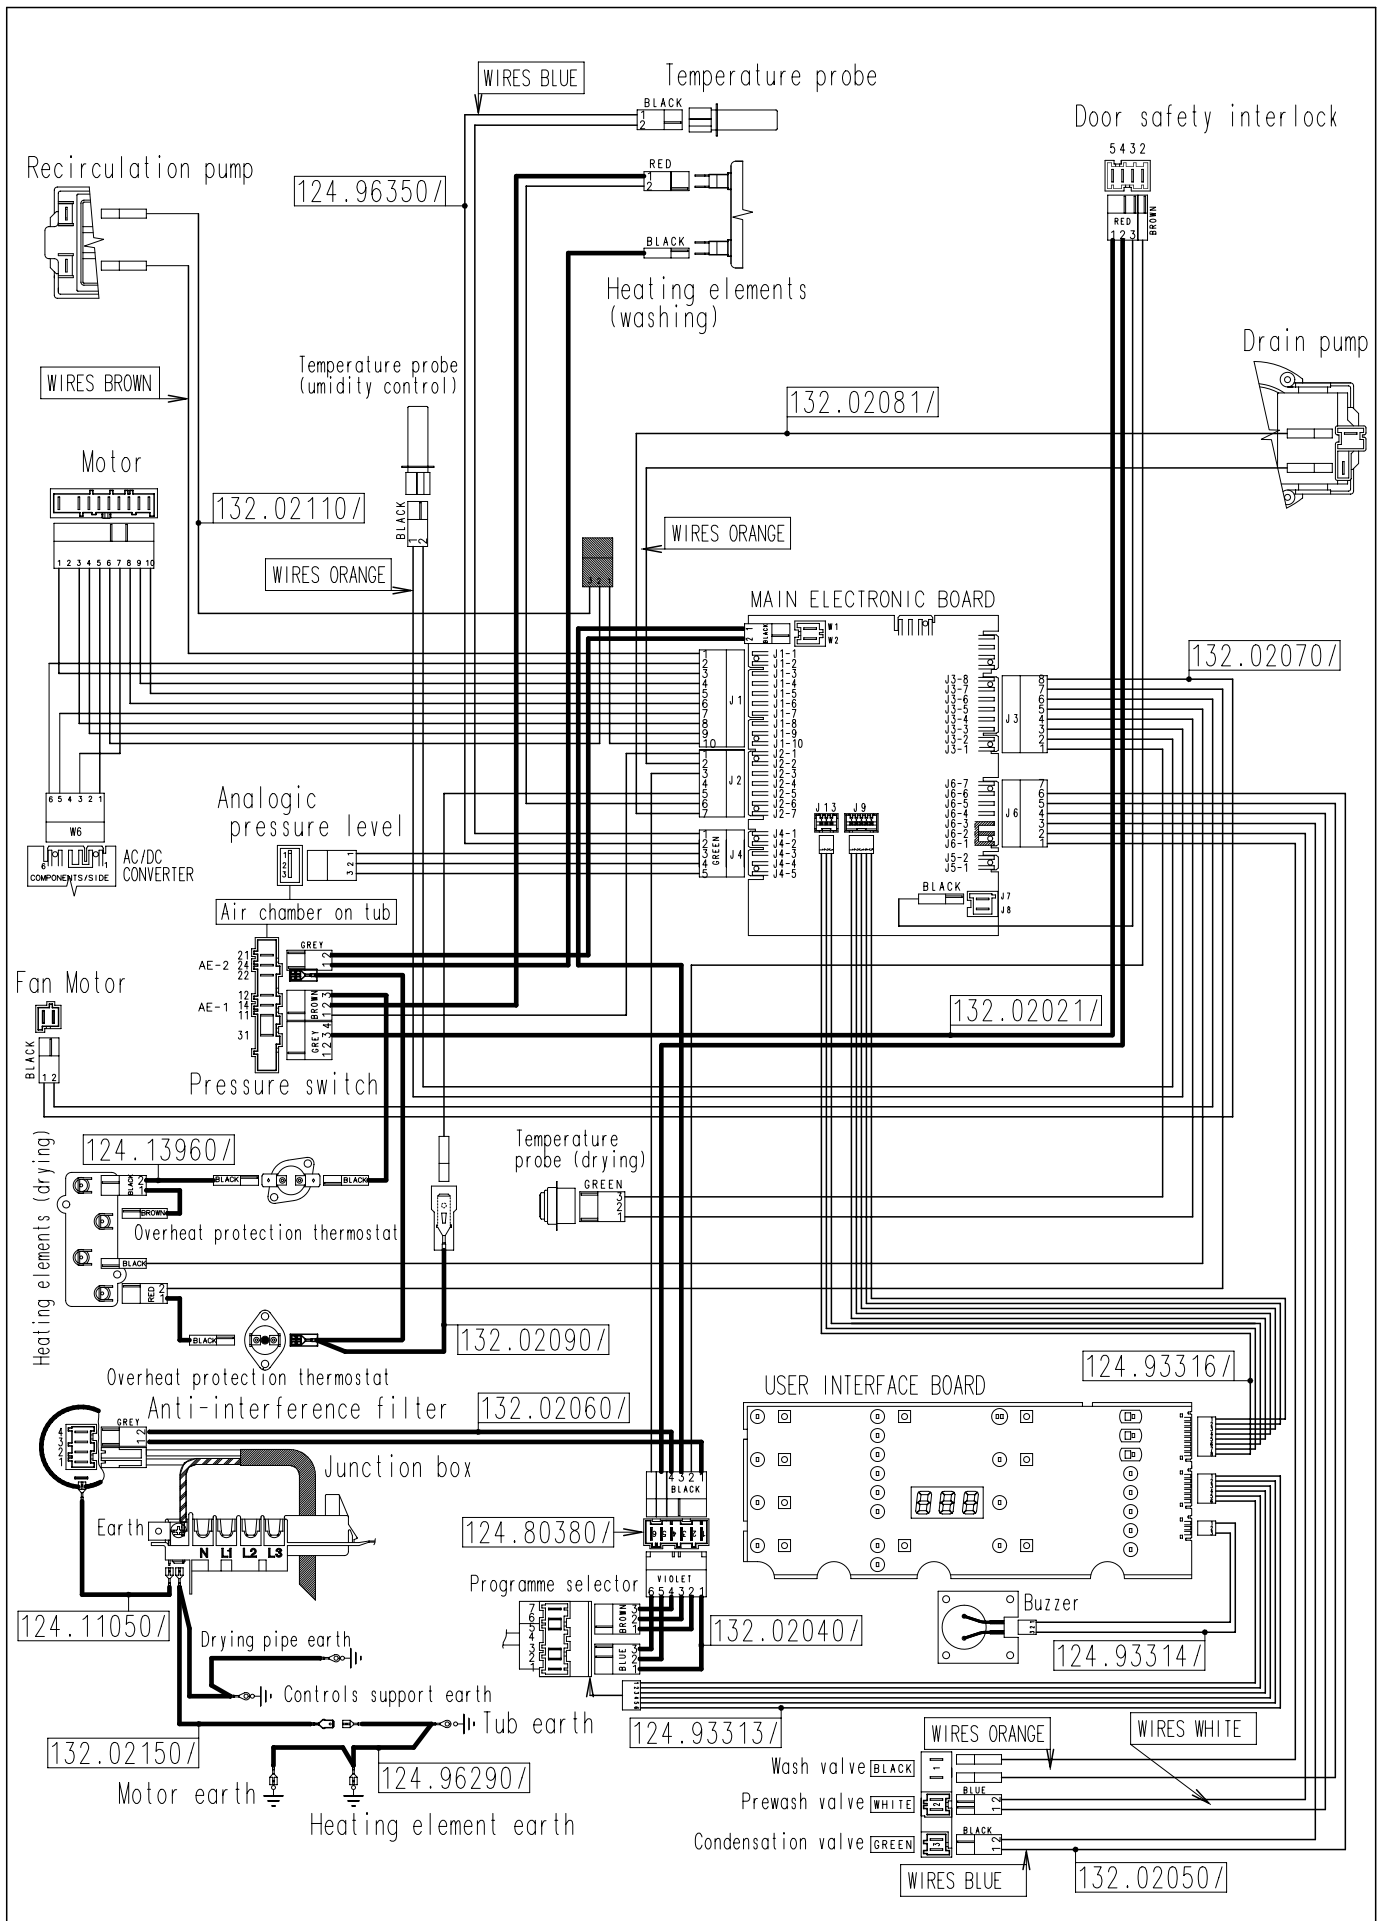

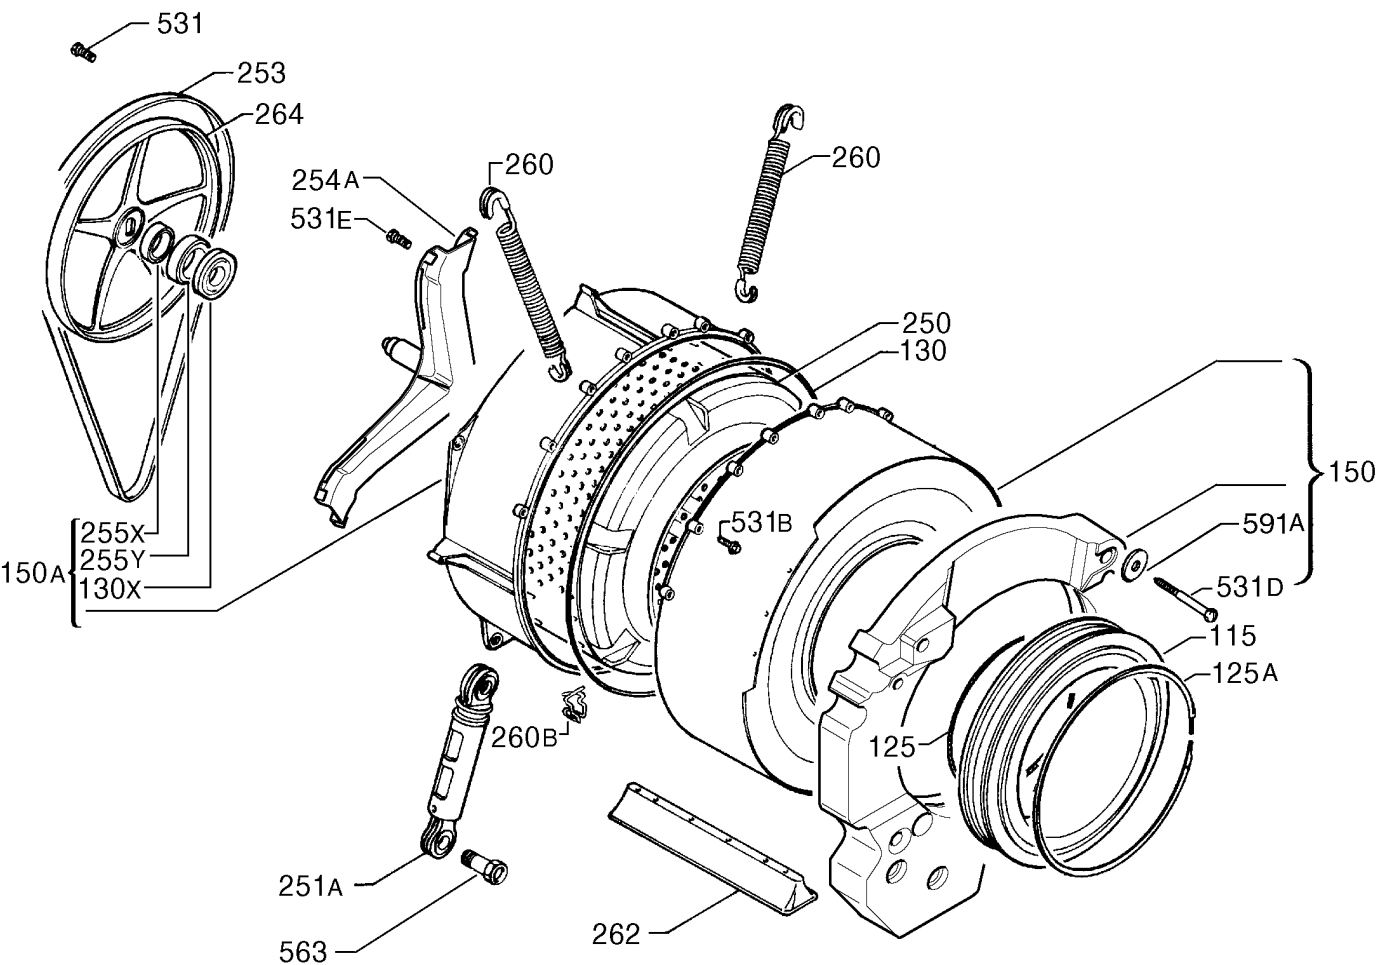

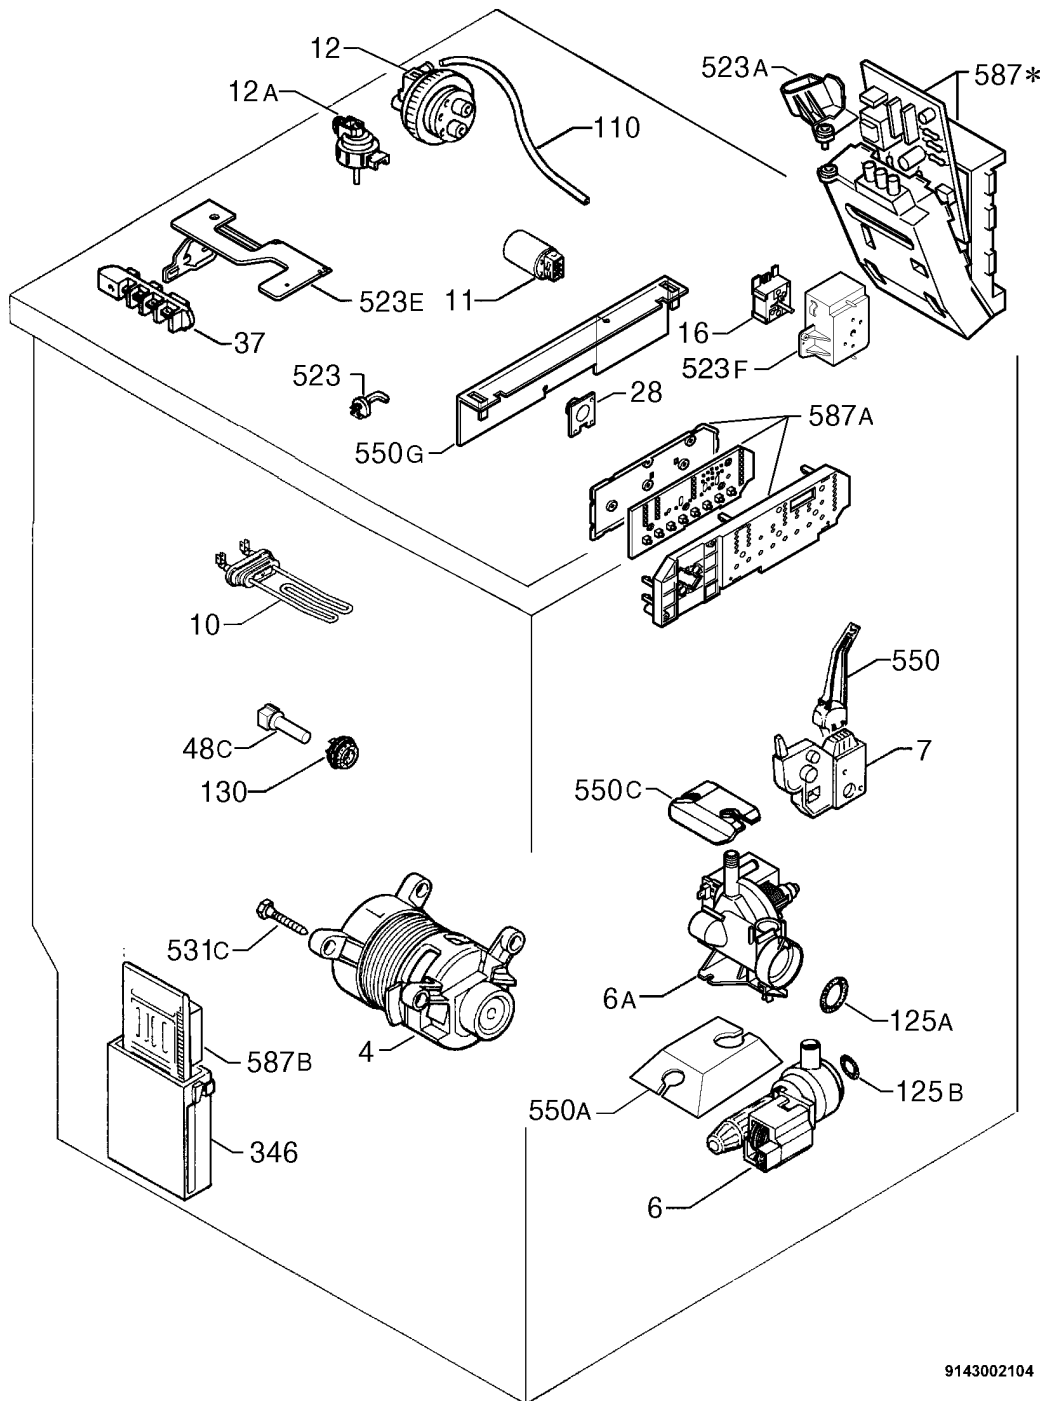


9143002104


**ATTENZIONE !** La scheda non è configurata. Per la configurazione utilizzare il cod. 990 (non è un ricambio).

**IMPORTANT!** No configuration has been performed on the PCB. For its configuration please use the code no. 990 ( it is not a spare part).

\* **ACHTUNG!** Die Elektronik wurde nicht konfiguriert. Die Konfiguration wird durch die Code 990 ausgeführt (es andelt sich nicht um ein Ersatzteil).

**ATTENTION!** le module électronique n'a pas été configuré. Pour sa configuration utiliser le code 990 (il ne s'agit pas d'une pièce de rechange).

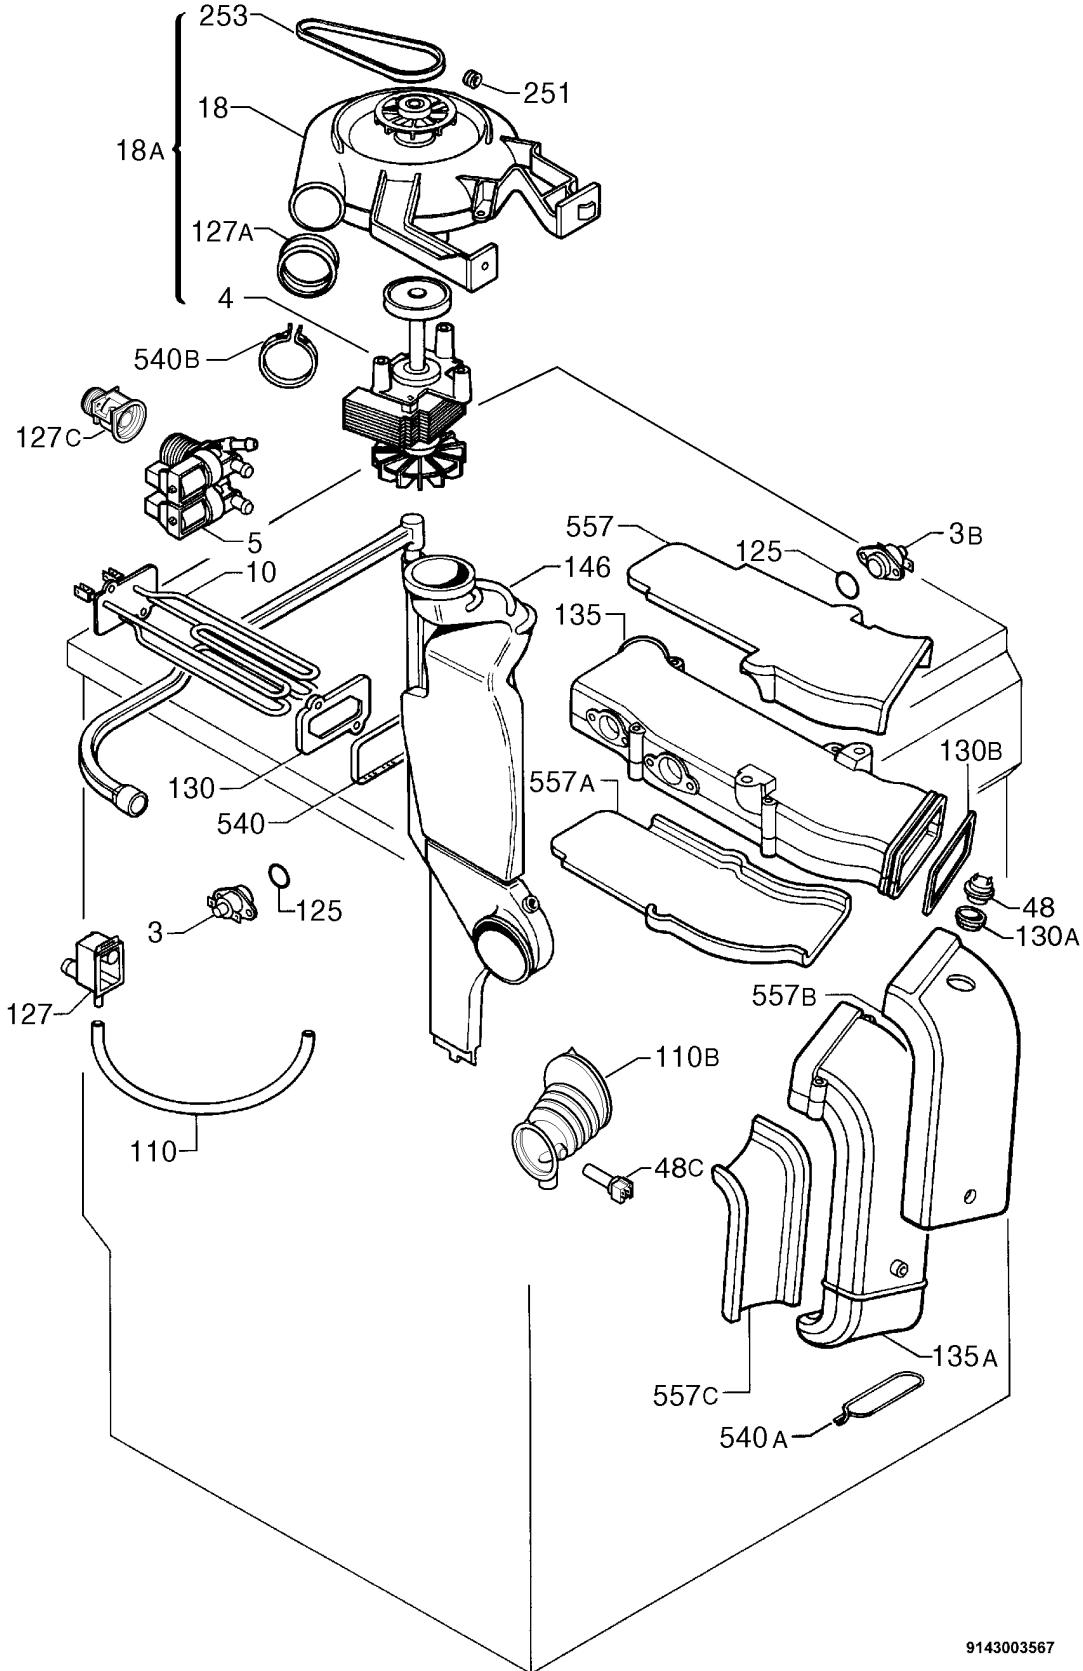

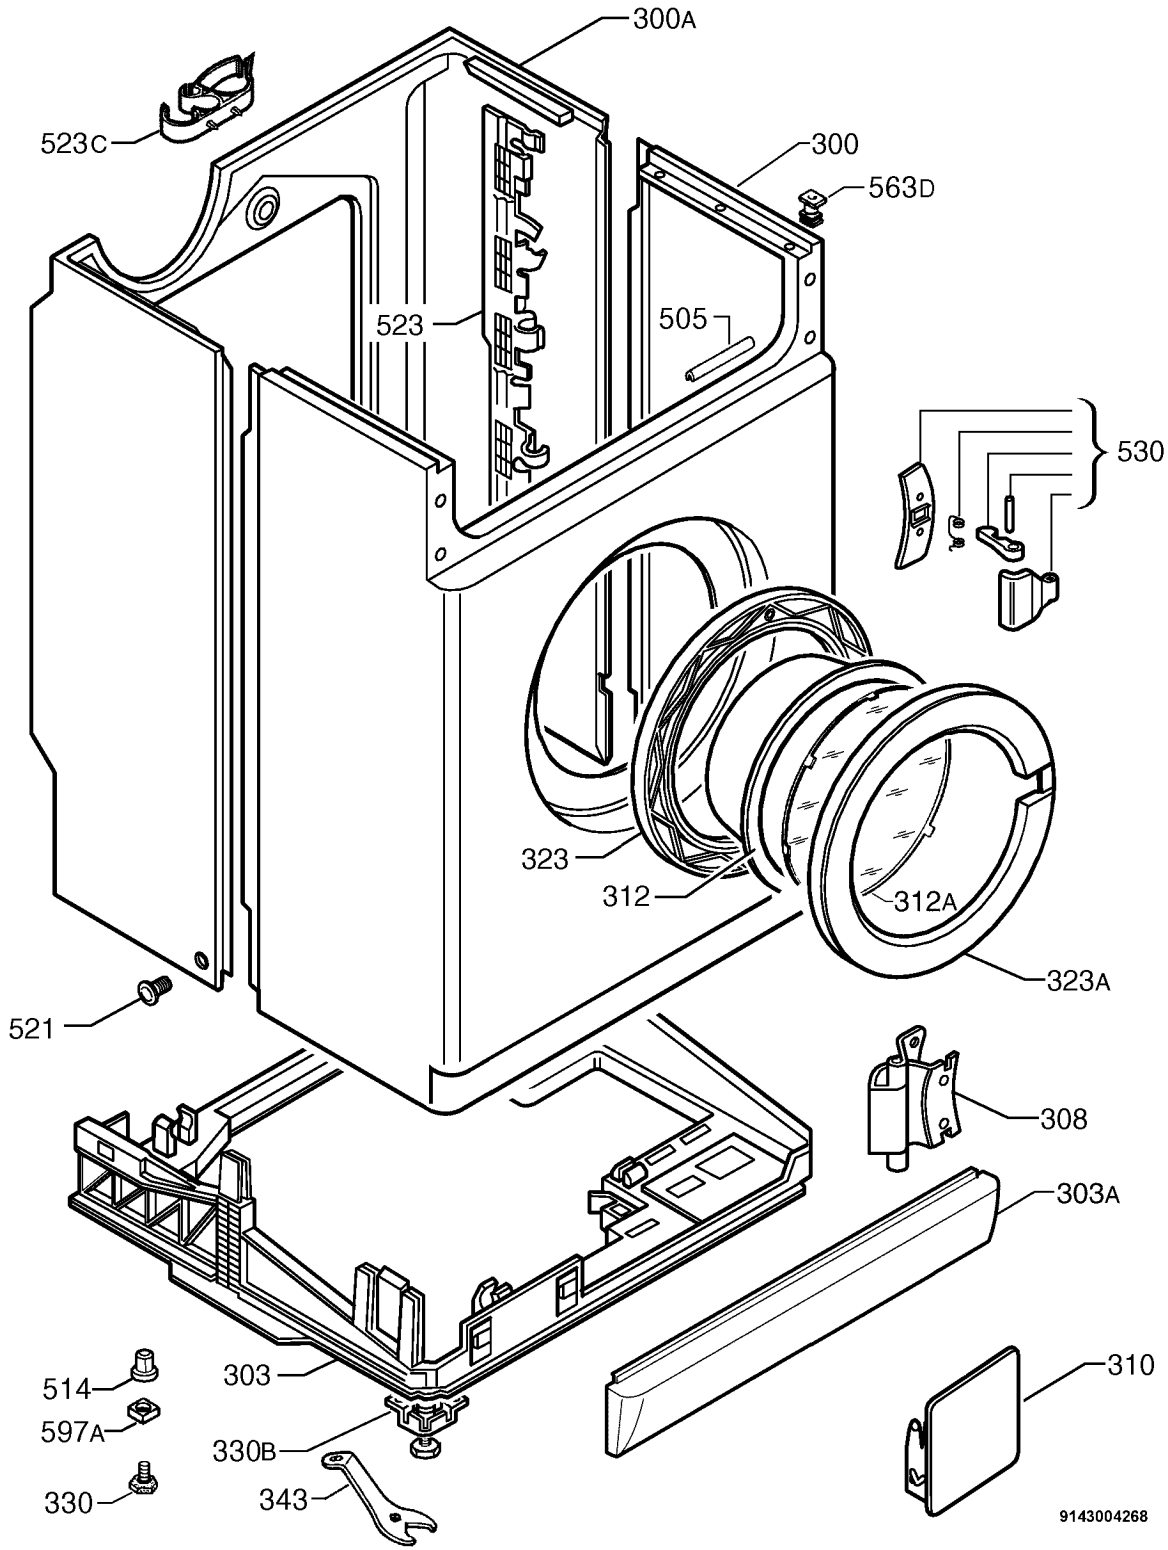



SUPPLIED TOGETHER  
\*  
LIVRES ENSEMBLE  
ZUSAMMEN GELIEFERT  
FORNITI INSIEME

